



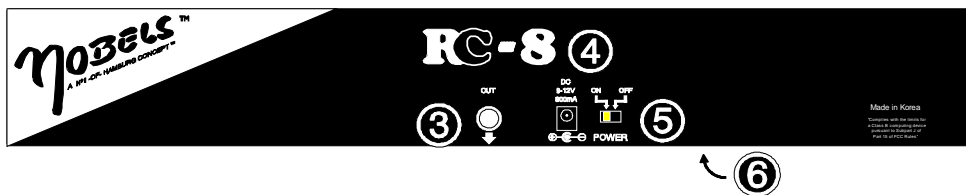

RC-8

REMOTE CONTROLLER for the NOBELS MS-8

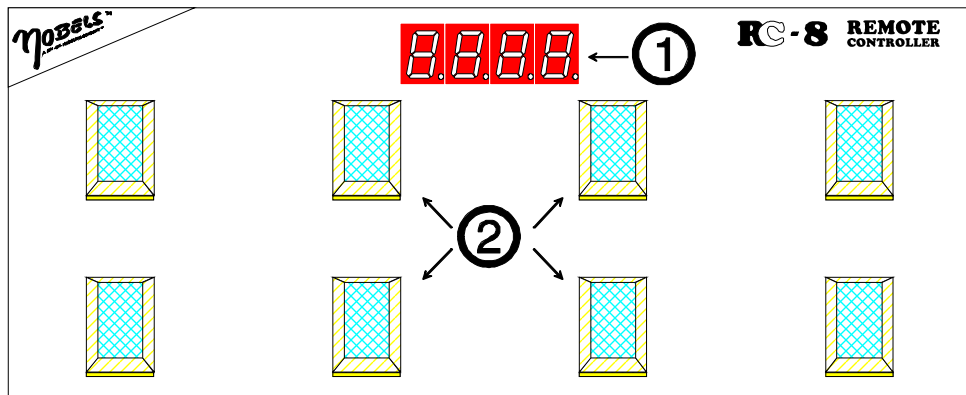

- (1) Display
- (2) Footswitches 1-8
- (3) Connection via standard stereocable to the MS-8. (max.25m)
- (4) Connection to an external powersupply adaptor. 9V DC 0.5A
- (5) ON /OFF power switch
- (6) Battery compartment (bottom)

USE WITH POWER SUPPLY ADAPTOR:

Connect a power supply adaptor to jack (4).

USE WITH BATTERIES:

On the bottom of the RC-8 is the location of the battery compartment (6). Open it with a screwdriver or a coin. The RC-8 needs 6 pcs. of the batterytype R14 "Baby cell".

CONNECT TO THE NOBELS MS-8

Connect the OUT jack (3) of the RC-8 with one standard stereocable to the FS-8 jack of the NOBELS MS-8.

HOW TO USE...

The power switch (5) switches the unit on.

The display shows: [---].

If you change programs or songs, etc. on the MS-8 the display (1) of the RC-8 shows you the current state. You get 4 more footswitches with the RC-8. (Switch 5-8). All 8 switches are configurable from the NOBELS MS-8. (see *Owners manual NOBELS MS-8*).

DISPLAY:

PROGRAM Pxxx xxx = Programnumber 1-128
 PROGRAM TOUCH -xxx xxx = Programnumber 1-128

SONG & STEP

xx-y xx = Songnumber 1-100 (100=00)
 -y = Stepnumber 1-8

MIDI-TOUCH

nxxx xxx = Programnumber 1-128

SWITCH-TOUCH/TOGGLE

x -- x = Switchnumber 1-8
 -- = Switch = OFF status
 On = Switch = ON status

TECHNISCHE DATEN:

- PS-ADAPTOR 9 - 12V DC - 0.5A. (Polarität: ⊕ ⊖)
- BATTERY 6x 1,5V R14 / baby.
- DIMENSIONS 430x170x65mm.